PC Only - Power on Sequence

- 1. PC/Router switch on @ Power Panel
- 2. PC switch on above Nav Zeus 3
- 3. Power on PC button top left

Instruments Only - Power on Sequence

- 1. PC/Router switch on @ Power Panel
- 2. Router switch on above Nav Zeus 3
- 3. Wait 30 seconds for Router to initialize
- 4. CHRT PLT, VHF/AIS/GPS, INSTRMT on @ Power Panel

PC & Instruments - Power on Sequence

- 1. PC/Router switch on @ Power Panel
- 2. Router & PC switches on above Nav Zeus 3
- 3. Wait 30 seconds for Router to initialize
- 4. CHRT PLT, VHF/AIS/GPS, INSTRMT on @ Power Panel
- 5. Power on PC button top left